


Daikin Altherma Flex

Controller Guide

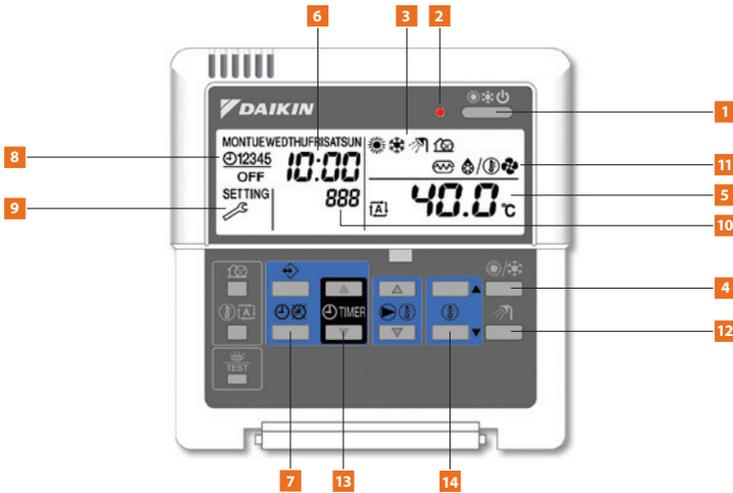

1. On/off button 
2. Operation LED – lit when in space heating or cooling. LED blinks when there is a fault in the system
3. Operation mode icons –
Space cooling  / Space heating  / Domestic hot water  / Quiet mode 
4. Heat/cool button 
5. Temperature display – indicates leaving water set point or actual room temperature
6. Clock display **10:00**
7. Schedule timer button  /  – enable / disable timer
8. Schedule timer icon  – indicates when schedule timer is active
9. Inspection required 
10. Error code display – when inspection icon  is displayed & LED blinking
11. Defrost / start up mode 
12. Domestic hot water button  – enables / disables hot water & shower symbol displays in 'operation mode icons' when enabled
13. Time adjust buttons  / 
14. Room temperature adjust buttons  / 

How to use your remote controller

Clock settings

To set time, press and hold  /  for 5 seconds, clock and day of the week will start to flash

Use  /  buttons to set the correct time and use   /   buttons to select the correct day. Press  to confirm and save adjustments

Domestic hot water operation

To activate DHW timer schedule press  the time clock icon will appear on display (default time is set to 1am)

Reheat will keep the tank temperature at a minimum of 45°C, to activate press  the shower head symbol will appear on display

To boost hot water, press and hold  for 5 seconds and the shower head symbol will start to flash

Selecting space heating operation (heating only system)

Press  to turn unit on, press  /  then  to select heating mode. The red operation LED will light up

Use  /  to set desired room temperature between 16°C - 32°C

Selecting space heating and space cooling operation (heating/cooling system)

Press  to turn unit on, press  /  then select either heating  or cooling  mode. The red operation LED will light up

Temperatures can be adjusted on the individual room thermostats

daikin.co.uk

Dedicated homeowner support line: 0845 641 9271

Heating installer line: 0845 641 9070

The present leaflet is drawn up by way of information only and does not constitute an offer binding upon Daikin UK. Daikin UK has compiled the content of this leaflet to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin UK explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this leaflet. All content is copyrighted by Daikin UK.